 


deli

USER MANUAL

Laminator

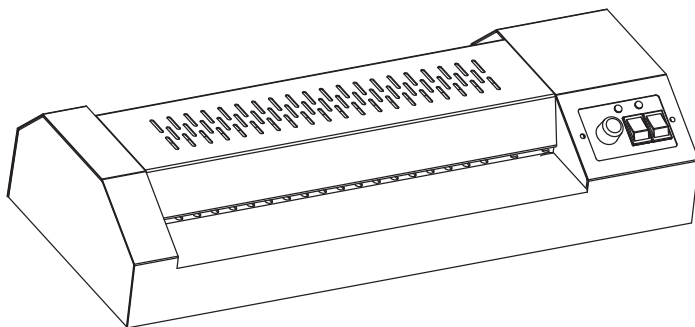

T131

Thank you for purchasing a Deli laminator. Please use Deli branded laminating pouches with the Deli laminator which will preserve your documents and photos, making them waterproof, tear-proof, cleanable and delicate. Be mindful that removal of lamination could be very difficult and risky.

To avoid personal injury or property damage, please read this manual carefully and use the product accordingly.

1. Attention

The plug on the power supply cord is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

The appliance shall be connected to a MAINS socket outlet with a protective earthing connection.



Warning! Keep out of the reach of children.



Warning! Do not touch the pouch inlet with your hand during operation.



Warning! Do not touch the surface of the machine with your hand during operation.



Warning! Please do not allow tie, necklace, sleeves, etc. to get pulling into the pouch inlet.



Warning! Please do not allow your hair to get pulling into the pouch inlet.



Warning! Please be cautious of hot surface during operation.



Warning! Do not disassemble or repair the machine by yourself in any way, to avoid electric shock or accidental injury in case that an item gets pulled into the laminator and the machine fails, please unplug the power cord and contact your dealer or after-sales service center and follow their instructions.



Warning! Do not splash water onto the machine, avoid a fire or electric shock.



Warning! Do not operate the machine with wet hands, to avoid electric shock or accidental injury.



In case of power outage during operation, please pull out the item being laminated evenly within a short time, and unplug the machine, to avoid fire or electric shock.



Warning! Do not damage or process the power cord or place objects on the power cord, to avoid a fire or electric shock.



In case of smoke, odor or other abnormal conditions, please turn off the power switch immediately and stop using, to avoid a fire or electric shock.



Always unplug the power plug before moving the laminator.



Do not use the laminator if the machine or power cord is damaged, to avoid a fire or electric shock.



When operating the power switch, please make sure that the power plug is properly inserted into the power socket, to avoid damage to the machine. (There will be a crisp crackling sound when the switch is in good contact)



Correct state



Error state



Correct state



AC voltage.



To refer to text in an accompanying document.



Only suitable for use in indoors.



This appliance bears the WEEE mark (Waste of Electric and Electronic Equipment) signifying that, at the end of its life cycle, it should not be disposed of with household waste, but at a recycling centre. The recycling of waste contributes to the conservation of our environment.

2. Safety Instructions (Please follow the following precautions to ensure safe use)

Placement of the laminator:

- (1) Do not put the machine in damp place or near the air conditioning vent, to avoid dangerous accidents such as electricity leakage and insulation failure.
- (2) Please ensure the machine is on a flat and level surface, and leave enough space on the side of the pouch outlet.
- (3) Please do not place anything on top of the laminator.
- (4) Be sure to use AC230V power supply.

Laminating pouch:

 
- (1) It is recommended to use the laminating pouches of our company. Pouch of other specification or defective pouches may get caught in the laminator.

- (2) It is recommended to use a laminating pouch 5~6mm larger than the item to be laminated. Inappropriate sized pouches will affect the lamination effect negatively. If there is no pouch with the right size, a larger pouch may also be used. Please place the item within pouches centered as shown in Figure A below and trim it after lamination.

Items to be laminated:

Lamination is conducted through heating and pressurization. The laminating pouch might be rolled up into the machine due to incorrect operation. Therefore, please do not laminate the following items:

- (1) Inflammable and heat sensitive materials (e.g. plastic bags, etc.)
- (2) Important and unique documents.
- (3) Items with a thickness of more than 0.6mm (inclusive of the laminating pouch).
- (4) Items that will discolor or deteriorate after heating such as heat-sensitive paper and the paper with patterns drawn with crayons

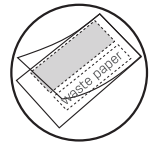


when the laminating film doesn't fit; figure A


3. Laminating Guide

Please DO NOT operate as below:

 - (1) Place the open end of the pouch into the machine.
- (2) Place the pouch into the machine at an angle.
- (3) Put the item to be laminated into an inappropriate sized pouch, and leave too much space around your contents
- (4) The original items to be laminated are undulating or curled.
- (5) Two consecutive pouches are connected together.
- (6) Cut the pouch before use.
- (7) Use deformed laminating pouches.
- (8) The length of the item to be laminated is less than 65mm.

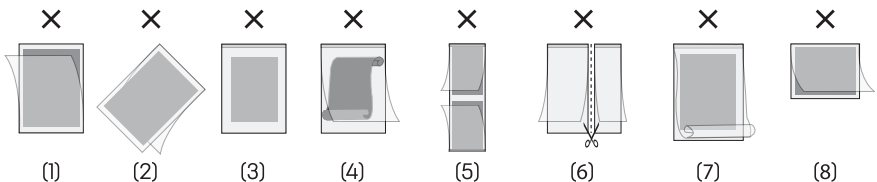

 4. Product Diagram

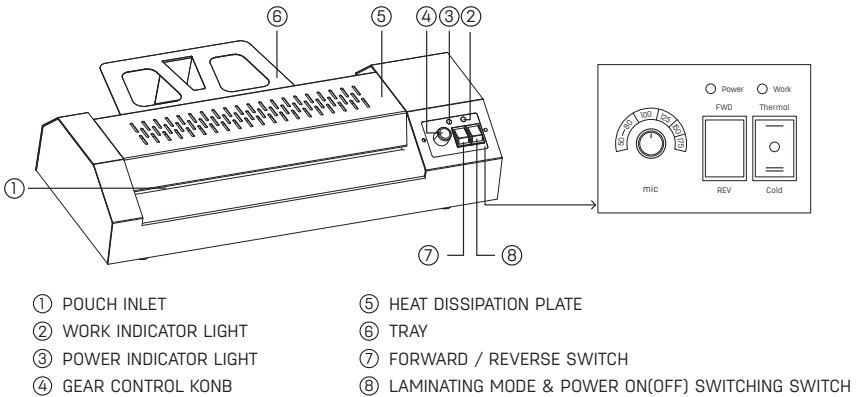

5. Laminating Guide

1. Power on:

Connect the power cord, turn the switch to "Thermal", and the power light will turn red.

2. Thermal laminating:

the laminating pouch with thermal laminating (50mic~175mic) is adopted.

>Adjust the knob to the corresponding gear according to the thickness of the laminating pouch used;

>The machine will warm up for about 7 minutes, and when the green indicator remains on, it is ready for laminating.

>If the laminating part does not feed correctly or jams, turn the switch to "REV", and the laminating part will automatically exit from the film inlet.

3. Cold lamination:

With cold lamination pouch, if cold lamination is required after thermal laminating, turn the switch to "Cold" and idle the machine for a few minutes before laminating the pouch when the green light is on.

4. Shutdown:

After laminating, turn the gear switch to "Cold", idle and cool the machine for 5-10 minutes, then turn the switch to "O" to turn off the power and unplug the power plug.

5. Laminating effect description:

Due to the differences in paper thickness and different brands of laminating pouches, adjust the knob gear according to the required laminating effect.

6. Tray:

When the document comes out of the pouch outlet after laminating, it will bend downward to a certain extent due to its own weight. Hang the tray on the back of the machine to improve the laminating effect.

Installation method: Hang the hook on the tray onto the back of the machine, ensuring that the tray surface is slightly lower than the pouch outlet after placement.

6. Maintenance

1. Cleaning rubber roller: after long-term use of the machine, molten plastic residue will be stuck on the rubber roller, which will easily cause the laminating pouch to get stuck in the machine. In addition, the plastic residue will be difficult to remove once solidified, so please remove it carefully.
Cleaning steps: please feed medium-thick sheets (such as calendar paper or catalog paper) through the machine without being centered in a pouch, and use hot lamination to laminate it several times.
2. Cleaning of the laminator: Please unplug the machine before cleaning, and gently wipe with a soft cloth slightly dampened with water. Do not use solvents such as gasoline, alcohol or diluent. Never use metal brush, tool brush or shovel to tap the rubber roller, so as to avoid scratching it.
3. Please protect your laminator from dirt with an appropriate dust cover, when it's not in use for an extended period of time.

7. Packing List

#	Name	Quantity	Remark
1	Laminator	1X	
2	Tray	1X	
3	User Manual	1X	

8. Technical Parameters

No	T131
Maximum laminating width	320mm / A3
Current	1.95A
Voltage	230V~/50Hz
Maximum thickness	≤0.6mm
Laminating speed	330mm/min
Heating mode	Cold/Thermal Laminating
Warm up time	About 7 min
Product Dimensions	440mm×175mm×95mm

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiaoke Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 05-2024