 


deli

USER MANUAL

 
Digital safe

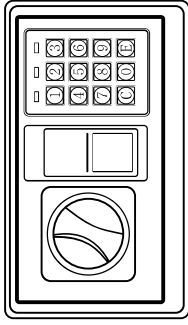

T510

INSTALLING METHOD

- Fix the safe in the places which is not easy to move.
- Turn the expansion bolts (or drilling screws) in the right place.
 - Turn the expansion bolts (or clamping screws) to secure the case to the wall.
 - Make sure the case is mounted in place as required and then tighten all screws.
- CAUTION:** Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

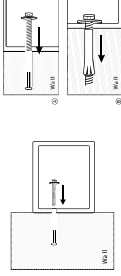


For any help, kindly consult the local distributor

INTELLIGENT ELECTRONIC SAFE




⚠ Please do not keep emergency keys in your safe!

 Dear valued customer:
Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our products have been designed and developed with you in mind, so we hope you can use them to add safe knowledge to your safe with the proper operating procedures of your new safe presented on the following pages. Again, thank you for choosing our products!

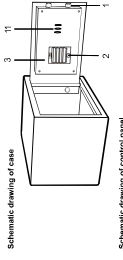

1. Bells
2. Reset Button
3. Emergency Lock Cover
4. Knob (Master Key)
5. Emergency Lock Cover
6. Yellow Light
7. Green Light
8. Power Supply (4 X AA Batteries)
9. Confirming button
10. Power supply (4 X AA Batteries)
11. Storage locks

   CAUTION: All drawings in this manual have been prepared based on the EA. The exterior design or component positions of other models may be different from what is indicated in the drawings, while the operation is the same.

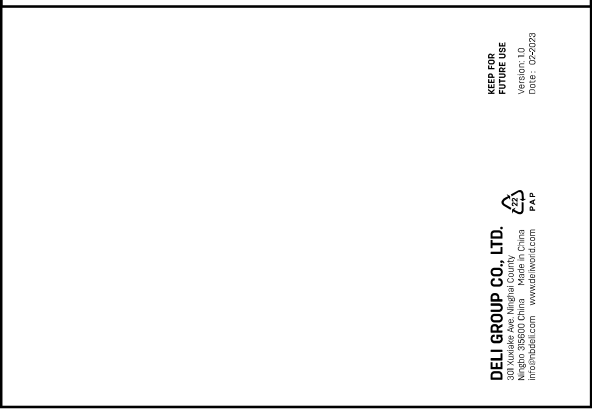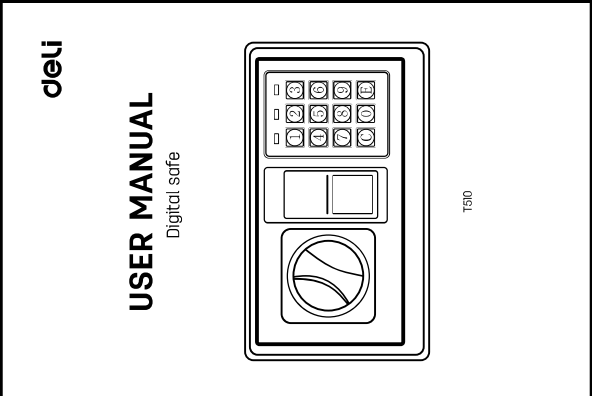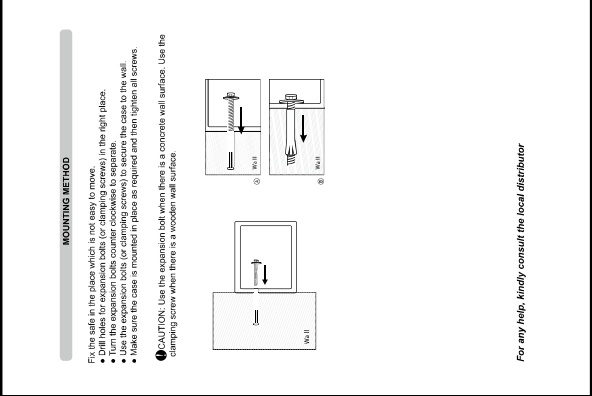

OPENING YOUR SAFE FOR THE FIRST TIME

When first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".

- Remove emergency lock cover, then insert the emergency key, and turn it counterclockwise.
- Turn the knob (master key) clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door.
- Insert 4 X AA batteries into the battery compartment.
- Under normal condition, if both of the red and the green lights are on at the same time, it means the voltage is low and you should insert fresh batteries.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+", "-", and "-" signs. When outage for longer than thirty minutes, you should insert the user's code.

OPENING DOOR

- Input your user's code (3 to 8 digits), each pressing results one buzzer beep and yellow light flashes.
- Press the "OK" (yellow) button, the green light will be on.
- Press the "C" (red) button, the green light will be on.
- Press the "K" (master key) clockwise and just clockwise within 5 seconds, the door is opened.

CAUTION: The user reset code is "1557". Please input the user code again if the yellow light flashes with three buzzer beeps.

CLOSING DOOR

- Turn the knob (master key) counter clockwise to close the door.

AUTOMATIC LOCK

- 3 continuously wrong entries will activate the warning beep for 20 seconds.
- **The door has not been opened with the password, the next 2 continuously entries will be blocked.**
- **CAUTION:** The key could be blocked during this waiting. You can only stop the choice by opening the safe with emergency key and power-cut by removing the battery.

SETTING THE USER CODE

- With the door open, press the reset button one, start setting code when the yellow light goes on.
- Press the "OK" button, the yellow light will flash once.
- Confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
- When yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes were wrong, you could use the emergency key to open the safe.

- Remove the emergency lock cover.
- Insert the emergency key, turn it counterclockwise, then turn the knob (master key) clockwise to open the door.

WARRANTY CARD

This card is for your reference of our products. The details of products were authorized our products will be provided for you and the distributor due to produce them in previous. Please contact authorized door dealers or distributors for any help and consulting during the warranty period.

Warranty terms:

1. The product manufacturer and dealer shall accept the responsibility for the quality of the product.
2. The product shall be repaired free of charge within one year after the date of purchase.
3. A complete warranty shall be provided for the product that the main parts have not been used in the way that is not in accordance with the manufacturer's instructions.
4. A set of repair tools and services will be provided in the event of fire of the following circumstances:
 - (1) Malfunction of the working period.
 - (2) Malfunction of the main parts.
 - (3) Malfunction of the main parts in accordance with the requirements of the manufacturer's instructions.
 - (4) Malfunction of the main parts in accordance with the requirements of the manufacturer's instructions.
 - (5) Repair parts to accessories.

The warranty card is valid only for the products that are sold with this card. After this warranty card is used, customers will not be able to enjoy the warranty services from us. Customers' liability will not be accepted.

Serial number: _____ Date of purchase: _____

_____ _____

WARRANTY CARD

Product Name:	Serial Number:
Manufacturer:	Date of Purchase:
Company Name:	City:
Address:	Street:
Phone:	Zip Code:
Province:	Country:
Manufacturer's Representative:	Signature of Distributor:
Signature of Distributor:	Signature of Customer:
Address:	Address:
City:	City:
Zip Code:	Zip Code:
Country:	Country:
Product Name:	Serial Number:
Manufacturer:	Date of Purchase:
Company Name:	City:
Address:	Street:
Phone:	Zip Code:
Province:	Country:
Manufacturer's Representative:	Signature of Distributor:
Signature of Distributor:	Signature of Customer:
Address:	Address:
City:	City:
Zip Code:	Zip Code:
Country:	Country:

THE CARD NEED BE CUT ALONG THE DOTTED LINE AND SENT BY THE MAIL.