

Item number _____

 Number _____

KEEP FOR FUTURE USE
 Version: 1.0
 Date: 02/2023




DELI GROUP CO., LTD.
 Deli Group Building
 No.36, 365640 China
 Made in China
 info@deli.com www.deliworld.com

deli

USER MANUAL

Digital safe

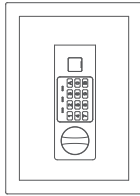

DIRECTORY


Product unpacking.....	01
Product diagram.....	01
First use.....	02
Battery installation.....	02
Password setting.....	02
Open door operation.....	03
Closing operation.....	03
Replace the battery.....	03
Emergency opening.....	03
Product installation.....	04
Precautions for use.....	04

Thank you for choosing Deli. Please read this instruction carefully and follow it before operating the safe.

DELI GROUP

Product unpacking

 After unpacking the package, please check whether the product appearance is intact and check all accessories. If there is any defect, please contact the dealer!

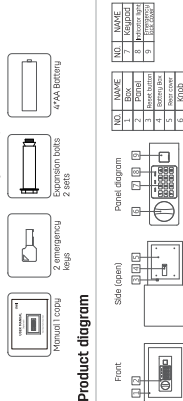

NO.	NAME	NO.	NAME
1	MANUAL COPY	4	EXPANSION BOLTS
2	EMERGENCY KEY	5	4*AA BATTERY
3	EXPANSION BOLTS	6	FRONT

DELI GROUP

First opening

Push up the small cover plate on the right of the electronic panel to expose the emergency keypad. Insert the emergency key and turn it counterclockwise. Then turn the emergency key pad as shown, then the yellow indicator light will turn off. The safe will open.

Battery installation
 The battery cover is located behind the door. Remove the battery cover and insert the new batteries according to the polarity. Always ensure you are using new batteries with full charge.

Password setting

The factory password is 158. For safety, please set your personal password in time. Press the emergency key once and yellow indicator light will turn on. Press the emergency key pad as shown, then the new code (3-5 digits) and press the emergency key pad as shown, then the yellow indicator light will turn off. The safe will open. Note: Test the new password with the door open before locking the door.

DELI GROUP

Opening the safe

Input the correct password, press "X" or "Y" key to confirm, the buzzer beep once and green indicator light turns on, please ensure turn the knob to open the door within 5 seconds. If the door does not open, please enter the password again. If you enter the password consecutively times after the 20 seconds lockout, will automatically unlock. Attention: Entering the wrong password 3 more times will lock the safe for 5 minutes.

Locking the safe

Simply close the door and turn the knob counter-clockwise.

Replace the battery

Press "X" or "Y" key after password input, if the red indicator lights up when the green indicator light blinks, that's indicating low voltage. Please replace the batteries.


Emergency opening

The emergency keys allow you to open the safe at all times, even when the batteries are run out or you have forgotten the codes. The operation method is the same as first opening.

DELI GROUP

Product installation

The product with predrilled mounting holes for easy fixing to a floor or wall with included expansion bolts.

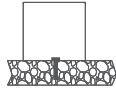

Installation diagram

Precautions for use

Keep away from direct sunlight and heat sources, and prevent the product from falling from high altitude. Keep it in a safe place. If you do not use the product for a long time, please take out the battery to prevent leakage from damaging the electronic system.

DELI GROUP

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or Deli Group for repair and replacement.

Warranty Period: 1 year from the date of purchase.
 The warranty period is valid only under normal operating circumstances. Free of charge repair and spare parts replacement services shall be provided to our company within one year commencing from date of purchase, request for warranty service. This warranty card shall be valid only after the following form is filled out in full.
 No free of charge repair service shall be provided in the event of any of the following circumstances:
 Expiration of the warranty period.
 Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual.
 Failure or damage resulting from unauthorized disassembly, repair or modification.
 Wear parts or accessories.

This warranty card is being delivered with the product, and each for our product. Please keep this warranty card in a safer condition for free warranty service. There is no replacement of lost.

Date of Purchase: _____ Y _____ M _____ D

DELI GROUP

WARRANTY CARD

Product Information	Product Name	Serial Number
Customer Information	Model Number	Buying Date
Address	Company Name	Contact
Dealer Name	Address	Phone
Address	Address	Contact
Date of Purchase	Address	Phone
Description of Malfunction	Customer Signature	Service No.
Maintenance Results	Technician Signature	Maintenance Date
Maintenance Record		

This copy shall be cut along the dotted line and kept by the dealer.

DELI GROUP

WARRANTY CARD

Product Information	Product Name	Serial Number
Customer Information	Model Number	Buying Date
Address	Company Name	Contact
Dealer Name	Address	Phone
Address	Address	Contact
Date of Purchase	Address	Phone
Description of Malfunction	Customer Signature	Service No.
Maintenance Results	Technician Signature	Maintenance Date
Maintenance Record		