


Form number: _____
Number: _____

DELI GROUP CO., LTD.
30 Xuxi Lake Ave. Ninghai County
Ningbo 355000 China Made in China
info@deli.com www.deliworld.com

KEEP FOR FUTURE USE
Version: 1.0
Date: 02-2023

deli

USER MANUAL
Digital safe

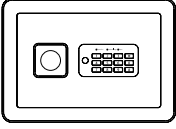


Thank you for choosing Deli. Please read this instruction carefully and follow it before operating the safe.

DELI GROUP

Product unpacking

After unpacking the package, check whether the product appearance is intact and check all accessories. If there is any defect, please contact the dealer!



DELI GROUP

WARRANTY CARD

Product Information	Product Name	Serial Number
Customer Information	Product Model Number	Manufacturing Date
Sales Information	Company Name	Contact
	Address	Phone
	Order Name	Contact
Maintenance Record	Address	Phone
	Date of Purchase	Warranty No.
	Warranty Description	Customer Signature
	Maintenance Results	Maintenance Date
	Customer Signature	
	Maintenance Description	


DELI GROUP

WARRANTY CARD

Product Information	Product Name	Serial Number
Customer Information	Product Model Number	Manufacturing Date
Sales Information	Company Name	Contact
	Address	Phone
	Order Name	Contact
Maintenance Record	Address	Phone
	Date of Purchase	Warranty No.
	Warranty Description	Customer Signature
	Maintenance Results	Maintenance Date
	Customer Signature	
	Maintenance Description	

DELI GROUP

 Product diagram



No.	1	2	3	4	5	6	7
NAME	Door panel	Electronic keypad	Emergency key	Key	Code number button	Rear cover	Emergency key
No.	8	9	10	11	12		
NAME	Knobs	Yellow light	Red Light	Green Light	Wipe		

DELI GROUP

Common faults and troubleshooting methods

Fault phenomenon	Cause of failure	Elimination method
No response is received when the password is entered numerically	Battery dead	Use the emergency key to open the electronic combination lock and reset the code.
	Battery polarity is reversed	Load the battery correctly.
The emergency key cannot be inserted or removed	Circuit board fault	Please contact the maintenance department.
	There's a foreign object in the keyhole	Remove foreign bodies from keyholes.
The electronic combination lock has been opened, the door cannot be opened	The key is not turned to the limit	Please insert it in the correct way.
	After turning the handle for a long time, the handle for the electronic lock is not	Reset the password and turn to the limit in 6 seconds.
Alarm does not go off	Battery dead	Please replace the battery.
	Battery polarity is reversed	Load the battery correctly.

DELI GROUP

Open door operation

Enter the correct password, press "M" button to confirm, the buzzer beeps twice, green light, please turn the knob within 5 seconds to open the door. If you enter incorrect passwords for three consecutive times, the user will be locked out for 20 seconds. If you enter incorrect passwords for three consecutive times after 20 seconds, the user will be locked out for five minutes.

Closing operation

Close the door and turn the knob counterclockwise to lock the door.

Replace the battery

After entering the password, press the "M" key to confirm. When the green light shines, the red indicator lights up at the same time. In this case, the buzzer sounded five times in succession, indicating that the battery voltage is insufficient, please replace the battery with a new one.

Emergency opening

Emergency keys can be used to open doors in cases where electronic codes cannot be opened. The operation method is the same as "first open door".

DELI GROUP

Product installation

The product has 2 mounting holes in the back and is secured to a solid concrete wall with included expansion bolts.



DELI GROUP

Precautions for use

Keep away from direct sunlight and heat sources to prevent the product from falling from high shelves. Keep it in a safe place. If you do not use the product for a long time, please take out the battery to prevent leakage from damaging the electronic system.

This product is a safe deposit box, please do not store excessive cash and special valuables.