 


deli

# USER MANUAL

Digital safe

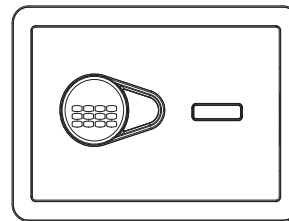

T540/T541

## DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdeli.com www.deliworld.com



KEEP FOR  
FUTURE USE

Version: 1.0  
Date: 04-2023

## Contents

1. Product Unpacking	1
2. Product Diagram	1
3. Initial Use	2
4. Password Setting	2
5. Door Opening/Closing Operation	2
6. Emergency Opening	2
7. Alarm Instructions	3
8. Installation Instructions	4
9. Precautions for Use	4
10. Common Faults and Troubleshooting	5
11. After-sales Service	6

Welcome to our series products of safes (cabinets) and lock boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

## 1. Product Unpacking



Instruction manual×1



Spare keys×2

 


Expansion bolt×2




AA battery×4

## 2. Product Diagram

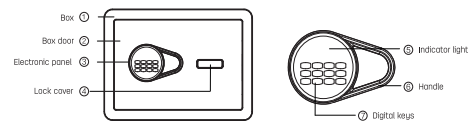

Front

 Electronic panel

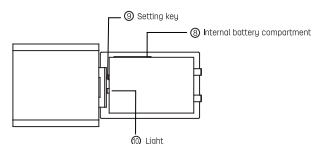

Under door opening status

### 3. Initial Use

1. After placing the box, remove the lock cover, insert the key into the lock hole, turn the key counterclockwise, and then turn the handle clockwise to open the door. Install four 4×AA batteries into the battery compact behind the box door.
2. For convenience, please store the user manual and keys in a safe place instead of in the box.

### 4. Password Setting

Enter the initial password and press the [#] key to confirm, then open the box door, press the setting key on the back of the box door, with the sound of "beep" twice, the yellow light is steadily on, enter a new password of 1-8 digits, press the [#] key to confirm, with the sound of "beep" twice, the yellow light goes out, and the password setting is successful.

The initial password of this product is "12345678". Please reset your personal password before use to ensure safety.

### 5. Door Opening/Closing Operation

1. Open the door with password  
Enter the password and then press [#] to confirm. When "Beep" sound is heard twice, the green light will be on. Turn the handle clockwise to open the door. If the password is entered incorrectly, the keyboard yellow indicator flashes and beep five times.  
When the password is entered to open the door, the interior LED lights up for 30 seconds.
2. Door Closing Operation  
Push the door into place and turn the handle counterclockwise to complete the closing.

- 2 -

### 6. Emergency Opening

Please use the spare key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the initial use.

### 7. Alarm Instructions

Wrong password alarm

1. If the wrong password is entered, the yellow light flashes and the box will beep five times.
2. The box alarm will last for 50 seconds if incorrect password is entered for three consecutive times. Entering the correct password can stop the alarm.

Vibration alarm

Press and hold the # key, a beep sound is heard and the yellow light is on, upon which the vibration alarm function is turned on. The alarm function needs to be reset after each password unlocking.

 
Low battery alarm

After entering the password, if the green light and red light are on at the same time, it indicates that the battery is low and needs to be replaced. It is recommended to replace the battery once a year.

- 3 -

### 8. Installation Instructions

Always fix the cabinet to a solid concrete wall for safe keeping.

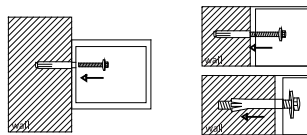

Installation layout

### 9. Precautions for Use

1. Do not put the user's manual, spare keys in the box, they should be stored in other safe place.
2. The battery should be taken out to prevent the leakage of liquid from damaging the electronic system if the product is left unused for a long time.
3. Always fix the cabinet to a solid concrete wall for safe keeping.
4. Do not store too much cash and valuables when unattended or without a remote alarm device.

- 4 -

### 10. Common faults and troubleshooting

Symptoms	Cause of failure	Method of exclusion
No any response when pressing the digit keys to enter the password	The battery is dead	Open the door with the spare key and replace the battery
	Battery polarity reversed	Insert the batteries in the correct way
	Fault: PCB	please contact the maintenance department
The spare key cannot be inserted in or removed	Foreign matters in the keyhole	Remove foreign matters from the keyhole
	The key does not turn to the limit position	Please reinsert in the correct way
The door cannot be opened when the electronic code lock has been opened	The handle is not turned to the limit	Please turn the handle to the limit.
	The handle has been turned for more than 7 seconds and the electronic lock has been reset	Enter the password again and turn the handle to the limit within 6 seconds
The alarm does not sound	The battery is dead	Replace the battery
	Battery polarity reversed	Insert the batteries in the correct way

- 5 -

### WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

**Warranty terms:**

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase:    \_\_\_ Y    \_\_\_ M    \_\_\_ D

### WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

### WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date