 


deli

Instruction Manual

Hotel Safe

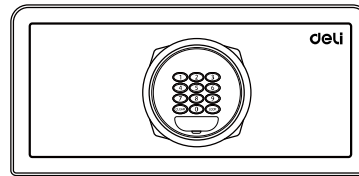

T547

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



KEEP FOR
FUTURE USE

Version: 1.0
Date: 02-2023


Contents

1. Product Unpacking	1
2. Product Diagram	1
3. First Use	1
4. Door Closing Operation	2
5. Door Opening Operation	2
6. Change Guest Password	2
7. Change Master Password	3
8. Switching Between Home and Hotel Modes	3
9. Battery Energy Detection	3
10. Points for Attention	4
11. Precautions for Use and Installation	4
12. Common faults and troubleshooting methods	5
13. After-sales Service	6


Thank you for choosing DELI safe box, please carefully read the instructions before use, and according to the instructions to operate correctly.

1. Product Unpacking

 After opening the packaging box, please confirm whether the product appearance is intact and check off all accessories. In case of any loss or damage, please contact the dealer.



 2. Product Diagram

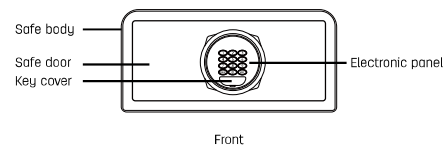

3. First Use

When first use, please placing the product properly, take off the lock cover, insert the emergency key into the lock hole and turn clockwise to open the door, and then install 4×AA alkaline batteries into the battery box behind the door back.

4. Door Closing Methods

- ① Close the door and insert the key into the keyhole, turn it counterclockwise and then pull out, the door is closed.
- ② Hotel mode: Close the door and input 3-6 digits guest code, press the "Lock" button. When "CLOSED" is displayed, the door is closed.
- ③ Home mode: Close the door and press the "Lock" button directly. When "CLOSED" is displayed, the door is closed.

5. Door Opening Methods

- (1) Guest Password Opening
In the door closed state, enter the user password. When "OPENED" is displayed, the door is open.
- (2) Master Password Opening
In the door closed state, the master password is a 6-digits code. The procedure for opening with the master password as follows: Quickly press the "LOCK" key twice, displaying "SUPER." Enter the current valid master password (default master password is "000000"), and when "OPENED" is displayed, the safe door will be opened automatically.

6. Change Guest Password

In the open state (make sure the locking bolts fully retracted), push the door and enter a new 3-6 digit user password, then press the "LOCK" button. When "CLOSED" is displayed, the door is closed automatically, and the new user password has been successfully modified.

7. Change Master Password

To change the master password, the safe box must be in the open state (with the locking bolts fully retracted). Follow these steps:
Enter "CLEAR" key twice consecutively, displaying "PROG".
Input the current valid master password (default master password is 000000). Press the "LOCK" key, "NEW" displayed. Then enter a new 6-digits master password. Press the "LOCK" key, displaying "DONE", indicating the password successful modification.

8. Switching Between Home and Hotel Modes

- (1) Press the "CLEAR(*)" button twice, displaying "PROG".
- (2) Press the digits "711469", showing the programming interface. Details for mode switching are as follows:
 - ① Home Mode: Press the digits 117051, then press the "LOCK" button three times consecutively to switch to home mode.
 - ② Hotel Mode: Press the digits 117050, then press the "LOCK" button three times consecutively to switch to hotel mode.

9. Battery Energy Detection

 
Press the "LOCK" key to enter the battery energy detection procedure. If the display shows "BATT-H" indicates the battery voltage is normal. If the display shows "BATT-L" indicates the battery voltage is low, please replace the battery. If "BATT-L" is displayed when the door is closed, the battery voltage is low and the battery needs to be replaced as soon as possible.

10. Points for Attention

- (1) When the password is entered incorrectly, press the "CLEAR" key to delete all.
- (2) If the password is entered incorrectly, the display shows "E-CODE" and the buzzer sounds an alarm. You can reattempt the operation.
- (3) If the incorrect password is entered continuously four times, the display shows "HOLD-5", and the system enters a 5-minute automatic lockout state. After 5 minutes, you can retry the operation.
- (4) In hotel mode, after entering the password, press the "LOCK" key to lock the door. In home mode, could be directly press the "LOCK" key to lock the door. (The default setting is hotel mode.)

11. Precautions for Use and Installation

- (1) Do not place the User's Manual, emergency keys, and external battery box in the box, store them in another safe place instead.
- (2) If the product is not used for a long time, remove the battery to prevent leakage from damaging the electronic system.
- (3) For the sake of safety, be sure to fix the cabinet on a solid concrete wall.

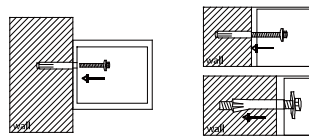

Installation layout

12. Common Faults and Troubleshooting Methods

Fault phenomenon	Fault causes	Troubleshooting methods
No any response when pressing the digit keys to enter the password	The battery is dead	Supply power to the digital keypad with external battery box or use emergency key to clean the door and replace the battery
	Battery polarity reversed	Install the battery in the correct way
	PCB board failure	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign objects from the keyhole
	The key is not turned to the limit	Please reinsert in the correct way
The door cannot be opened when input the correct password or fingerprint	The handle is not turned to the limit	Please turn the handle to the limit
	The handle has been turned more than 7 seconds and the electronic lock has been reset	Reenter the password or fingerprint, and rotate it to the limit within 6 seconds
The alarm does not sound	The battery is dead	Replace the battery
	The battery polarity is reversed	Install the battery in the correct way

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: ____ Y ____ M ____ D

WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model Number		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature

This copy shall be cut along the dotted line and kept by the dealer.

WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model Number		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature