


deli

Instruction Manual

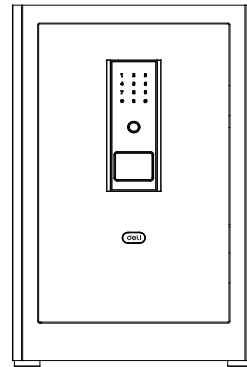

T595/T596/T597

DELI GROUP CO., LTD.
 301 Xuxiake Ave. Ninghai County
 Ningbo 315600 China Made in China
 info@nbdeli.com www.deliworld.com




KEEP FOR FUTURE USE
 Version: 1.0
 Date: 10-2023

Contents


1. Product Unpacking	1
2. Product Diagram	1
3. First Use	2
4. Password Setting	2
5. Fingerprint Setting	2
6. Function Setting	3
7. Door Opening/Closing Operation	3
8. Emergency Opening	4
9. Alarm Instructions	4
10. Installation Notes	6
11. Precautions for Use	6
12. Common Faults and Troubleshooting	7

Welcome to our series products of safes (cabinets) and lock boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

 1. Product Unpacking



2. Product Diagram

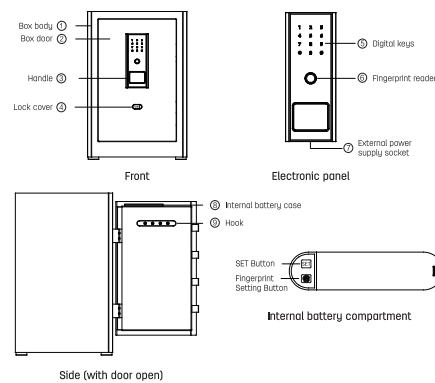

3. First Use

1. After placing the case, insert the emergency key and turn it to the left, then rotate the handle clockwise to open the door and install 4 "AA" alkaline batteries into the battery box behind the door.

2. For convenience, please store the user manual, keys in a safe place instead of in the box.

4. Password Setting

1. Open the safe door, click [SET] button and then press the [1] key on the electronic panel, and then set the password according to the voice prompts;

2. The length of the password is 3-8 digits, press the [#] key on the electronic panel to confirm after entering the password;

3. In case of an input error, press the [*] key on the electronic panel to delete it and then re-enter.

5. Fingerprint Setting

1. Open the safe door, press the [Fingerprint Setting] key and then register the fingerprint after hearing the voice prompt "Please press your finger". When registering, press different areas of your finger on the fingerprint reader. A total of five inputs are required. Once completed, the reader lights up green and the voice prompts "Entry successful, thank you".

2. When you need to delete the fingerprint, press the [Fingerprint Setting] key and hold for 3 seconds, then all the registered fingerprints will be cleared. Please enter a new fingerprint timely after deletion. A total of 30 fingerprints can be registered.

- 2 -

6. Function Setting

1. Vibration alarm: open the safe door, click [SET] and then press the [2] key on the electronic panel to turn on or off the vibration alarm.

2. Voice switch: open the safe door, click [SET] and then press the [3] key on the electronic panel to turn on or off the voice prompt.

3. Combined verification mode: open the safe door, click [SET] and then press the [4] key on the electronic panel to turn on or off the combined verification mode.

4. Anti-peeping virtual password: During the password input process, you can freely enter any password, as long as it contains the password you set, it will pass the verification.

7. Door Opening/Closing Operation

1. Open the door with password

① Touch the digital keypad to wake it up, press the [#] key to enter the password, and then press the [#] key again to confirm after password input completion. It will be unlocked with the correct password verified, and the voice prompts "Please open the door", turn the handle clockwise to complete the unlocking operation.

② In case the password is entered incorrectly, press the [*] key to delete them, and then re-enter the password.

③ The initial password is 12345678. Please change it before use.

2. Open the door with fingerprint

① Place your finger on the fingerprint reader and it will start to recognize the fingerprint after lighting up blue. Once the recognition is completed, the reader lights up green and unlocked. At the same time, the voice prompts "Please open the door", turn the handle clockwise to complete the unlocking operation.

- 3 -

② No fingerprints are registered from the factory. Therefore, any fingerprint can unlock the door. Please set your personal fingerprint in time before use.

3. Open the door through the combined verification mode

In this mode, the password and fingerprint both need to be verified in accordance with the verification method, and the door lock can be unlocked when the verification are successful.

4. Door closing operation

Push the door into place and turn the handle counterclockwise to complete the closing.

8. Emergency Opening

1. Please provide power with an external battery box when the batteries are depleted and the operation cannot be made. Insert the plug of the external battery box into the power supply socket located below the digital panel, and enter the correct password or correct fingerprint, then turn the doorknob clockwise to open the door.

2. Please use the emergency key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the initial use.

9. Alarm Instructions

1. Low battery alarm

① If the battery voltage is low during operations such as opening door or setting password, the system will issue a voice prompt "Low power, please replace the battery", and the user should replace the battery as soon as

- 4 -

possible.

② The system will stop working if the battery power is exhausted, you can open the door with the external power supply or the emergency key, the external power interface located below the digital panel.

2. Wrong password or wrong fingerprint alarm

① If the wrong password is entered 5 times, it will activate the alarm for 20 seconds and lock the control panel for three minutes, the electronic panel cannot be operated during lockout period.

② The alarm will ring for 20 seconds after the fingerprint verification fails for 5 times.

3. Vibration alarm

① After turning on the vibration alarm, the alarm will be triggered when the safe is pushed or shocked.


② When the system sounds alarm but not lockout, you can enter the correct fingerprint or password timely to disarm the alarm. During which the electronic panel cannot be operated.

③ After opening the door with the correct numerical password or fingerprint, the vibration alarm will not trigger within five minutes.

- 5 -

10. Installation Notes

For the sake of safety, be sure to fix the cabinet on a solid concrete wall.

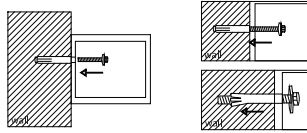

Installation layout

11. Precautions for Use

1. Do not put the user's manual and the emergency keys in the box, please store them in another safe place instead;
2. If the product is not used for a long time, remove the battery to prevent leakage from damaging the electronic system;
3. For the sake of safety, be sure to fix the cabinet on a solid concrete wall;
4. Do not store too much cash and valuables when unattended or without a remote alarm device.

12. Common Faults and Troubleshooting

Fault phenomenon	Fault causes	Troubleshooting methods
No any response when pressing the digit keys to enter the password	The battery is dead	Supply power to the digit keypad with external battery, box or use emergency key to open the door and replace the battery
	Battery polarity reversed	Install the battery in the correct way
	PCB board failure	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign objects from the keyhole
	The key is not turned to the limit	Please reinsert in the correct way
The door cannot be opened when input the correct password or fingerprint	The handle is not turned to the limit	Please turn the handle to the limit
	The handle has been turned more than 7 seconds and the electronic lock has been reset	Reenter the password or fingerprint, and rotate it to the limit within 6 seconds
	The battery is dead	Replace the battery
The alarm does not sound	The battery polarity is reversed	Install the battery in the correct way

WARRANTY CARD

Dear user,
Thank you for purchasing our products. To ensure the interests of our users, if the products fail due to quality issues, you can contact your local dealer or authorized maintenance station with the invoice and warranty card.

Warranty note:

1. Within one year from the date of purchase, if there is a fault during normal use, our company will provide free maintenance, component replacement, and other services based on the fault condition;

2. This warranty card and purchase invoice are vouchers for the company to provide after-sales service to customers. The following forms in this card must be completed in detail, and shall be valid upon being stamped by the dealer;

3. Under any of the following circumstances, free warranty service is not applicable and repairs will be charged:

- (1) Beyond the validity period of the warranty;
- (2) Damage caused by improper use, maintenance or storage not in accordance with the requirements in the product User's Manual;
- (3) Product malfunction or damage caused by force majeure;
- (4) Wearing parts or standard accessories.

This card is issued together with the product, one card for each product. In order to ensure that you can fully enjoy the free warranty service provided by our company, keep this card properly, and it will not be replaced if lost.

Purchase date: _____ (mm/dd/yyyy)

WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature

Service Hotline for Nationwide Connected Guaranteed Repair: 400-865-0555

WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature