 


deli

# Instruction Manual

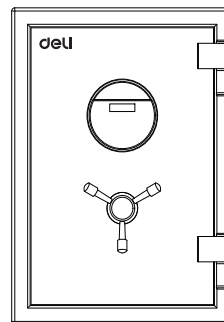

**DELI GROUP CO., LTD.**  
301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdeli.com www.deliworld.com



**KEEP FOR  
FUTURE USE**

 
Version: 1.0  
Date: 02-2023

## Contents


1. Product Unpacking	1
2. Product Diagram	1
3. First-time Use	2
4. Password Setup	2
5. Master Code Setup	2
6. Door Opening and Closing Operations	3
7. Emergency Opening	3
8. Alarm Instructions	3
9. Restore Factory Setting	4
10. Low Battery Voltage Warning	4
11. Installation Instructions	4
12. Usage Precautions	5
13. Common Malfunctions and Troubleshooting Methods	5
14. After-Sales Service	6

Welcome to choose DELI safe box. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

## 1. Product Unpacking



## 2. Product Diagram

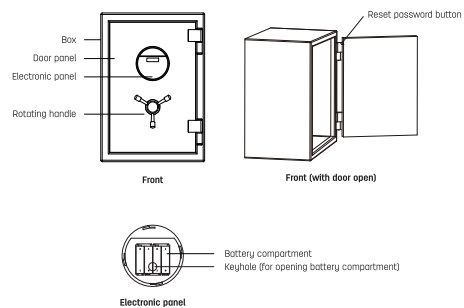 

### 3. First-time Use

- After placing the box in position, first turn counterclockwise the electronic panel to take off the battery cover (the keyhole is inside the battery compartment). Insert the key into the keyhole and turn it counterclockwise, then turn the handle clockwise to open the door. Install high quality and new alkaline 4×AAA batteries into the battery compartment on the electronic panel.
- For convenience, please store the instruction manual and keys in a secure place, and do not place them inside the box.

### 4. Password Setup

- Open the box door, press the setup button on the back of the box door, and the panel display shows "SET" while you hear a "beep" sound. The touch screen panel lights up.
- Then enter a 1-6 digits password and press "#" key to confirm, the buzzer sound a long beep while the panel display shows "success", indicating that the new password is set successfully.

### 5. Master Code Setup

- Touch the digital panel and arouse the screen to light up, input "00" and press the setup button on the back of the box door.
- Then enter 1-6-digits password and press the "#" key, the buzzer sound a long beep while the panel display shows "success", indicating the new master code is set successfully.

- 2 -

### 6. Door Opening and Closing Operations

- Open the door:  
Touch the digital panel and arouse the screen to light up, after entering the correct password, press "#" key to confirm. If you hear a long "beep" and the display shows "open", it indicates successful entry. Rotate the handle to open the box door.
- Close the door:  
After closing the door, turn the handle counterclockwise to lock the door.

### 7. Emergency Opening

If there is a malfunction in the electronic system or if you forget the password, please use the spare key to open the door. The method of opening is the same as the first time.

### 8. Alarm Instructions

- Touch the digital panel and arouse the screen to light up, press the "#" key, the buzzer will sound a long "beep" while display shows "BE-ON", indicating the vibration alarm is turn on.
- The alarm could be stopped by entering the correct password.
- After installing 4×AAA batteries, the vibration alarm is off by default.
- The vibration alarm turns off after each door opening and needs to be turned on again according to the first point operation.

- 3 -

### 9. Restore Factory Setting

 
- Press and hold the set button for about 3 seconds until the display shows "SUCCESS" and the buzzer sound a long "beep".
- The initial password is 123456, and the initial master code is 654321.

### 10. Low Battery Voltage Warning

If the battery voltage is low, after verifying and open the door, the display shows "bt-Lo", and the buzzer sound "beep" for 3 times, that indicates the battery is insufficient and a new battery needs to be replaced to ensure normal use.

### 11. Installation Instructions

For the sake of safety, please be sure to fix the cabinet on a solid concrete wall.

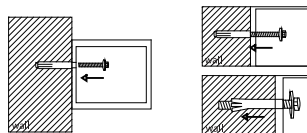

Installation layout

- 4 -

### 12. Usage Precautions

- Do not put the user manual, main lock key, emergency key inside the box. Store them in other safe places.
- If the product is not used for a long time, the battery should be taken out to prevent leakage from damaging the electronic system.
- For safety, be sure to secure the container to a solid concrete wall.
- Do not deposit excess cash and valuables without an on-duty or remote alarm device.

### 13. Common Faults and Troubleshooting Methods

Fault phenomenon	Cause of failure	Elimination method
No response is received when the password is entered numerically	Battery dead	Rotate the upper part of the electronic panel counterclockwise and unscrew the panel cover to replace the battery
	Battery polarity is reversed	Load the battery correctly
	Circuit board fault	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign bodies from keyholes
	The key is not turned to the limit	Please reinsert in the correct way
The electronic combination lock has been unlock. The door cannot be opened	The handle is not turned to the limit	Please turn the handle to the limit
	After turning the handle for more than 7 seconds, the electronic lock is reset	Re-enter the password and turn to the limit in 6 seconds
Alarm does not go off	Battery dead	Please replace the battery
	Battery polarity is reversed	Load the battery correctly

- 5 -

### WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

**Warranty terms:**

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase:    \_\_\_\_\_ Y    \_\_\_\_\_ M    \_\_\_\_\_ D

### WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model Number		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature

-----  
This copy shall be cut along the dotted line and kept by the dealer.  
-----

### WARRANTY CARD

Product Information	Product Name		Serial Number	
	Product Model Number		Manufacturing Date	
Customer Information	Company Name		Contact	
	Address		Phone	
Sales Information	Dealer Name		Contact	
	Address		Phone	
	Date of Purchase		Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature