deli

USER MANUAL

Laser Presenter No.S001



exclude the possibility of updating the content at 1 Product Introduction Our products are suitable for schools, educational institutions, government agencies, enterprises, and other organizations. LASER WINDOW

Warning (Reserved)

Laser radiation is harmful to human eyes. Do not aim laser directly at eyes or stare at the laser! Improper use may cause danger! This product is intended for office and educational use and is not suitable for children under 14 years old. Keep this product away from children

ser Radiation: Avoid direct

exposure to eyes. Class 3R laser

Red light wavelength: 630-670 nm Maximum laser radiation output: <

Declaration

The products and information mentioned in this manual are for reference only. We reserve the right to make changes without prior notice and do not


2 Product Specifications and **Parameters**

Remote Control Distance	100m
Laser Color	Red
Laser Power	<5mW
Power Supply	One size 7 battery
Product Dimensions	140mm x 18mm x 13mm
Package Contents	Laser presenter, receiver, user manual, AAA battery
Compatible Systems	Windows 11/10/8/7, Mac OSX 10.10 and above
Interface Type	USB-A
Supported Software	Microsoft PowerPoint, Kingsoft WPS Keynote
The above data is source	d from Deli Labs and is

subject to physical product specifications. This device does not support Kingsoft WPS hyperlink functionality and does not support full-screen and hyperlink functions in Keynote under Mac OS. Please ensure your input method is set to English when using.

- 02 -

3 Product Schematic Diagram

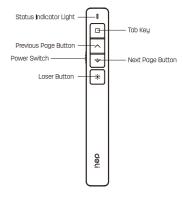

- 03 -

DELI GROUP CO., LTD. Dell Industrial Zone, Ninghai County, Ningbo City, Zhejiang Province, China Made in China info@nbdell.com www.deliworld.com

CERTIFICATE

Date of manufacture:



KEEP FOR FUTURE USE

- 01 -

4 Operation Guide

Buttons		Functions
Previous		Page Up
Page Button	Long Press	Fullscreen/Exit Fullscreen
Next Page	Short Press	Scroll down one page
Button	Long Press	Black Screen/Exit Black Screen
Laser Button	Press to act	ivate the laser
	Short Press	Select Hyperlink
Tab Key	Double Click	Open Hyperlink
	Long Press	Window Switching
Power	Set to "ON" to	power on
Switch	Set to "OFF" t	o power off
Status Indicator Light	it blinks once	structions: Press the button, e. Low Battery Notification: tton, it blinks rapidly.

5 Troubleshooting

Symptom of the problem	Cause of the problem	Solution to the problem
Laser Presentation Pointer Won't Power On	Battery Issue	I.Please confirm if the battery is installed correctly with the correct polarity 2.Please check if the power switch is turned on 3.Replace the bottery promptly if the battery is low
Receiver Not Recognized	Faulty USB Port on Computer	Please check if the USB port is functioning properly and try another USB port
Not functioning properly	Page-turning pen failed to connect with receiver	Please contact your local dealer
Function disorder	System malfunction	Please contact customer service for re-pairing

Maintenance

Our company is responsible for free maintenance in case of product failure within one year of normal use from the date of purchase.

The start date of the warranty period is subject to the purchase date and invoice of the product warranty card

Please show the product warranty card and invoice during maintenance.

Please keep this warranty card properly. If it is lost, it will not be replaced. The purchase date filled in must be consistent with the invoice number, otherwise it will

This card cannot be altered, otherwise it will be invalid. For products beyond the warranty period or not subject to free maintenance, the maintenance service center of our company is still enthusiastic

One of the following conditions does not belong to the scope of free maintenance: Iproducts beyond the warranty period 2. Those who cannot provide purchase invoices or valid vouchers.

3. The appearance is naturally old due to

- 3. The appearance is including out and to use, and the consumer requires updating.
 4. Failure caused by failure to use according to the instructions
 5. Failure caused by falling or collision.
 6. Failure caused by self assembly,
- disassembly and repair. 7. Samples and processed products for commercial display and products with performance overload test

- 06 -

CA WARRANTY Phor Mailing Address

City/town

Date of Purchase

Product Name

FORM

REPAIR

400		Replaced parts	parts	Maintenance
anna	nescribrion	Name	Quantity	
r For a	★ For any question, please contact your local dealer.	contact you	ur local	dealer.

- 04 -

- 05 -