

**DELI GROUP CO., LTD.** Deli Industrial Zone, Ninghai County, Ningbo City, Zhejiang Province, China Made in China


Version: 1.0 Date: 04-2024

KEEP FOR FUTURE USE

# deli

## **USER MANUAL**

Barcode Scanner No.S206

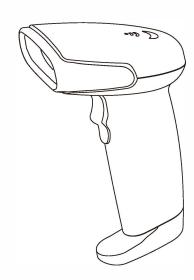


Dear customers , thank you for your products . We are committed to providing our customers with high quality products To ensure best performance, please read this manual carefully before use!

### How to use barcode scanner correctly

1.If the barcode is small, the barcode shall be close to the product scanning window; On the contrary, if the barcode is large, the barcode should be slightly away from the product scanning window, so that it is easier to read the barcode


correctly 2.If the barcode has a high reflectance (for example, the barcode surface is coated with film), the barcode should be kept at a certain angle with the product scanning window, so that the barcode can be successfully scanned.

3. When scanning the barcode, it must be aligned and the scanning line must be completely wrapped around the barcode for decoding. It is not allowed to scan only part of the barcode, otherwise there may be error code.

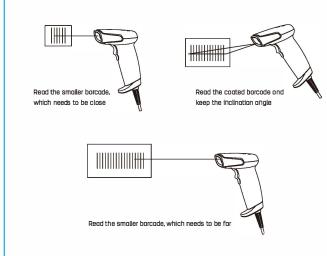

-1-

#### **Component description**

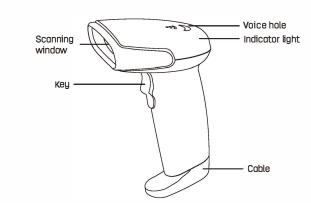

### Packing list

Barcode Scanner $\times$ 1, USB Cable $\times$ 1, Manual $\times$ 1, Paper Clip $\times$ 1

#### Technical parameter

Input voltage	DC 5V== 0.5A		
Operating current	140mA (typical value)		
Light source	Red LED		
Scan barcode category	1D code		
Reading accuracy	≥4.7mil		
Decoding type	AIM-128、Codell、code39、code93、code128、Codabar、Deutsche12、Deutsche14、EAN-8、EANI3、Industrial 2-of-5、Interleaved 2-of-5、ISSN、ISBN、ITF-14、Matrix 2-of-5、MSI-Plessey、Plessey、Standard 2-of-5、UCC/EAN-128、UPC-E、UPC-A		

- 2 -

#### Operating temperature 0°C ~ +45°C Storage temperature -20°C ~ +60°C 5%~90% (No condensated water) Prompt mode Buzzer, indicator light Interface type USB canning mode Manual, continu aus Can pass the 1.2m free fall test

#### Global configuration code setting



## Communication interface settings



#### Reading mode setting





- 3 -

### **Decode sound settings**





## **Common terminator settings**









### **Troubleshooting**

NO.	Problem	Possible causes	Solution	
1	The interface cable is correctly installed, but the red fill light is not displayed		Make sure the host is powered an and turned on. When using the USB connector, connect the USB to the USB connector on the computer motherboard. Do not use the extended USB connector and other USB extension cables	
		Incorrect connection of interface cable	Please check whether the cable connection is loose	
		This type of bar code system is not enabled	Open the code system by reading the setting code	
	There is a red	Bar code is damaged	Please try scanning other barcodes with the same barcade type	
2	fill light, but the barcode cannot be read	Improper distance between scanner and borcode	Please move the barcode scanner near or far away from the barcode	
		The height of the borcode scanner is not enough to completely cover the borcode	Read the barcode after aligning it	
3	The scanned data is displayed incorrectly on the host	Input method error	Convert the input method to the standard English input method	
		Other settings have been made to the scanner	Restore the scanner parameters to the factory settings, ar contact the manufacturer's service center.	
4	characters are garbled ar wrong setting of the barcade where the keyboard is used		Set the barcade scanner keyboard country to match the country where the keyboard is used	
5	Other conditions cannot be decoded	Device transfer error	Tum off the power supply of the equipment, or innect the equipment and thescanner currety, tumon the power supply of the equipment, restore the parameters of the scanning platform to the factory settings and scan the code again	

### Simple maintenance method

1.The dirt and dust on the scanning window sometimes affect the work of the scanner. When cleaning, you should use high-quality facial tissue paper, gently wipe it, and then blow it with a blowing balloon. If the paper with poor quality is used for wiping for a long time, the surface finish of the scanning window will be damaged and the reading effect of the scanner

2.The shell of the scanner can be wiped with a soft cleaning cloth. If necessary, a small amount of deteraent can be added with water, and then wiped with a soft cloth dipped in water.

## Maintenance

Our company is responsible for free maintenance in case of product failure within one year of normal use from the date of

The start date of the warranty period is subject to the purchase date and invoice of the product warranty card

Please show the product warranty card and invoice during maintenance.

Please keep this warranty card properly. If it is lost, it will not be replaced. The purchase date filled in must be consistent with the invoice number, otherwise it will be invalid.

This cord cannot be altered, otherwise it will be invalid. For products beyond the warranty period or not subject to free maintenance, the maintenance service center of our company is still enthusiastic to serve you.

One of the following conditions does not belong to the scope of free maintenance:

- 1.products beyond the warranty period
- 2. Those who cannot provide purchase invoices or valid vouchers.
- 3. The appearance is naturally old due to use, and the consumer
- requires updating.

  4. Failure caused by failure to use according to the instructions 5. Failure caused by falling or callisian.
- 6. Failure caused by self assembly, disassembly and repair.
  7. Samples and processed products far commercial display and

products with performance overload test

#### The table of toxic and hazardous substances/elements and their content

D-#	Hazardous and noxious substance or elements					
Part name	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Coble	0	0	0	0	0	0
Electronic ports	×	0	0	0	0	0
Injection molded ports	0	0	0	0	0	0

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006 «Requirements for Concentration Limits for Certain Hazardaus Substances in Electronic Information Products».

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006 «Requirements for Concentration Limits for Certain Hazardous Substances in Flectronic Information Products» Due to limitations of science and technology development, these toxic or hazardous substances cannot be replaced or reduced for now. Under normal use conditions, no leakage or abrupt change will occur within 10 years, nor will it cause pollution to the environment or damage to people and property.

Environment-Friendly Use Period:

This mark refers to the environment-friendly use period of electronic and electrical products sold in accordance with the Regulation of the People's Republic of China on Limit on Use of Hazardous Substances in Electric and Electronic Products and General Guidelines of Environment-friendly Use Period of Electronic Information Products.

- 7 -

Customer Name		phone		Postcode	
Mailing Address	,	2			
Product Name		Mod	el		
Dote of Purchase				Postcode	
Province		City/to	own		

**WARRANTY CARD** 

## **REPAIR FORM**

Date	D	Replaced	parts	Maintenance	
Dute	Description	Nome	Quantity	Technician	
,					
				ļ	
1		į.			

★ For any question, please contact your local dealer.

